

WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

- Water Resistant 3ATM or 30M (100 Feet)**
Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.
- Water Resistant 5ATM or 50M (165 Feet)**
Suitable for showering or swimming in shallow water.
- Water Resistant 10ATM or 100M (330 Feet)**
Suitable for swimming, snorkeling, but should not be worn while scuba diving.
- Diver's 20ATM or 200M (660 Feet)**
Meets the higher requirements of water resistant and suitable for scuba diving.
We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

GENERAL CARE FOR A WATER RESISTANT WATCH

- DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

IMPORTANT

YOUR WATCH IS EQUIPPED WITH A MECHANICAL MOVEMENT. THIS CAN BE CHARGED EITHER BY HAND WINDING OR BY AUTO-WINDING.
(BY THE MOVEMENT OF THE ARM OR BY THE WATCH WINDER).

STÜHRLING ORIGINAL



INSTRUCTION MANUAL - B AUTOMATIC MOVEMENT

CAUTION

DO NOT USE THE QUICK DATE FUNCTION BETWEEN 21:00 HRS AND 4:00 HRS, AS IT WILL DAMAGE THE INTERNAL PARTS OF THE MOVEMENT.
(Applicable for ALL versions)

2 HANDS OR 3 HANDS DISPLAY **A**

A

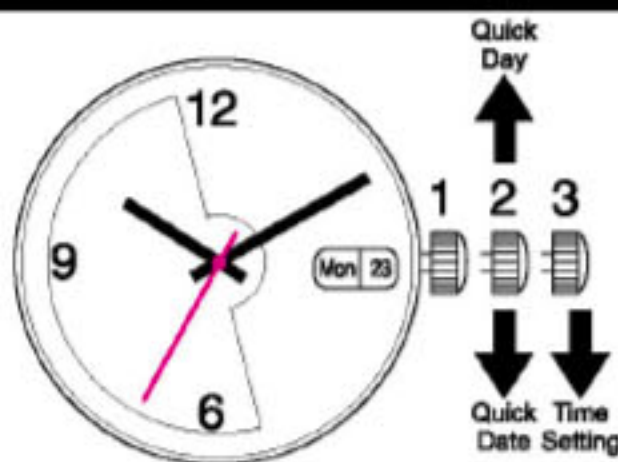

POSITION 1
Movement Winding Position

POSITION 2
Time Setting

- Gently pull the Crown to this position.
- Rotate the Crown backward to set the Time.
- The watch stops in this position.

Note:
For watches with Multi Time Zone, please refer instruction detail A or B.

2 HANDS OR 3 HANDS WITH DATE OR DAY-DATE DISPLAY **B**

B


POSITION 1
Movement Winding Position

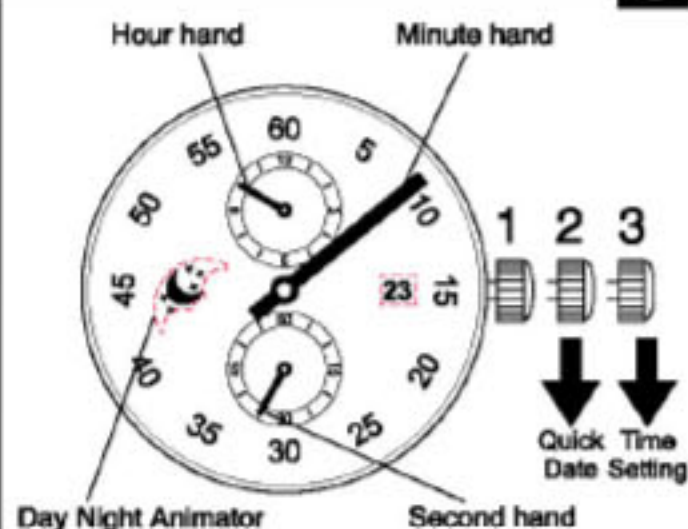
POSITION 2
Quick Date / Day Change

- Gently pull the Crown to this position.
- Rotate the Crown backward to set the Date.
- Rotate the Crown forward to set the Day.

POSITION 3
Time Setting

- Gently pull the Crown to this position.
- Rotate the Crown backwards to set the Time.
- The watch stops in this position.

REGULATOR (WITH SUN & MOON) **C**

C


POSITION 1
Movement Winding Position

POSITION 2
Quick Date / Day Change (optional)

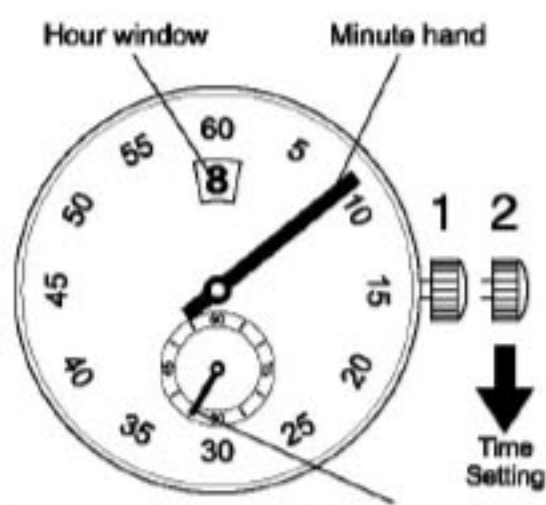
- Gently pull the Crown to this position.
- Rotate the Crown backward to set the Date.

POSITION 3
Time Setting

- Gently pull the Crown to this position.
- Rotate the Crown backwards to set the Time.
- The watch stops in this position.

(Optional features shown in red color.)

JUMPING HOUR **D**

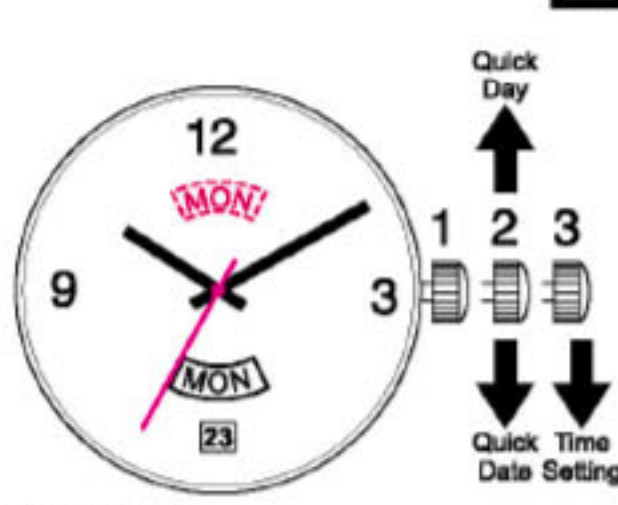
D


POSITION 1
Movement Winding Position

POSITION 2
Time Setting

- Gently pull the Crown to this position.
- Rotate the Crown backward to set the Time.
- The watch stops in this position.

SMILING DAY **E**

E


POSITION 1
Movement Winding Position

POSITION 2
Quick Date / Day Change

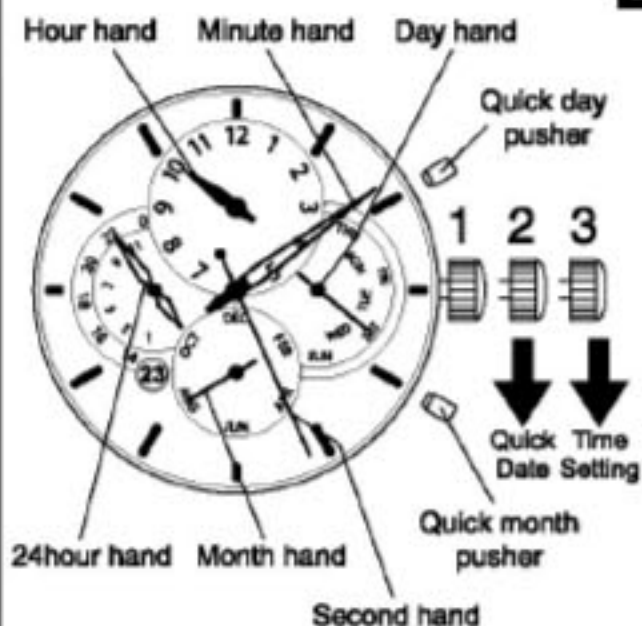
- Gently pull the Crown to this position.
- Rotate the Crown backward to set the Date.
- Rotate the Crown forward to set the Day.
- The watch stops in this position.

POSITION 3
Time Setting

- Gently pull the Crown to this position.
- Rotate the Crown backwards to set the Time.

(Optional Day position shown in red color.)

REGULAR MULTIFUNCTION **F**

F


POSITION 1
Quick Day Pusher

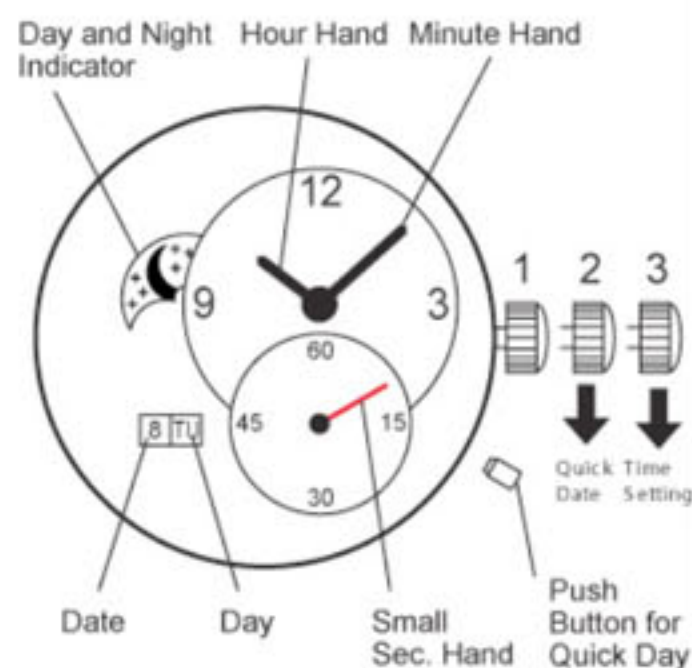
- Press button to set the day. For each press the day advances by one day.

Quick Month Pusher

- Press button to set the month. For each press the month advances by one month.

(For Quick Date Setting and Time Setting, please follow the REGULATOR's instruction)

WATCH DISPLAY



- DAY NIGHT INDICATOR ROTATES ALONG WITH THE HOUR HAND.
- DO NOT OPERATE THE QUICK DATE SETTING DURING 21:00HRS - 4:00HRS AS IT WILL DAMAGE THE DATE MECHANISM OF THE MOVEMENT.