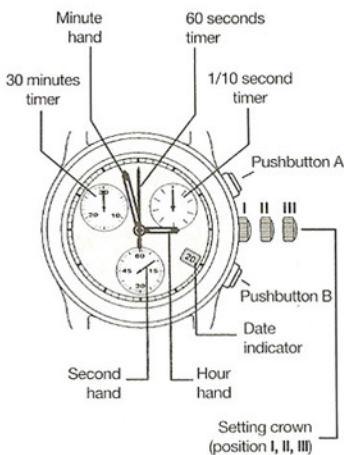
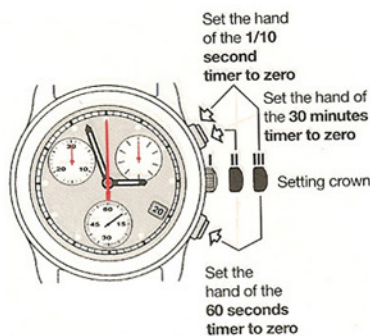
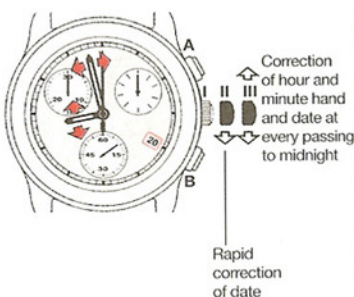
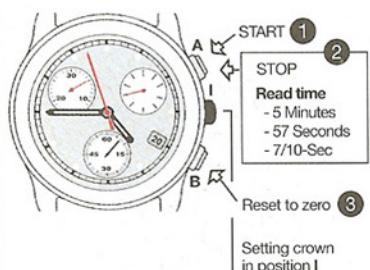


**DISPLAY****A****Watch hands****SETTING THE TIMERS TO ZERO****B****Setting crown in position II or III****STÜHLING ORIGINAL****INSTRUCTION MANUAL - D****CORRECTION MODE****C****Setting the time  
Correction of date**

**Note**  
Setting crown in position III : STOP-SECOND

**TIMING MODE****D****Simple timing function**

1 to 3 order of functions

**WARNING**

Before starting the time, put back the chronograph hands to their original position.  
If necessary, see paragraph SETTING THE TIMERS TO ZERO.


**IMPORTANT**

YOUR WATCH IS EQUIPPED WITH A QUARTZ CHRONOGRAPH MOVEMENT WITH ADD AND SPLIT FUNCTION.


THE MOVEMENT IS POWERED BY A SILVER OXIDE BATTERY.

\*BATTERY LIFE: ABOUT 2 YRS.


\* DEPENDING ON THE USAGE OF CHRONOGRAPH FUNCTIONS.

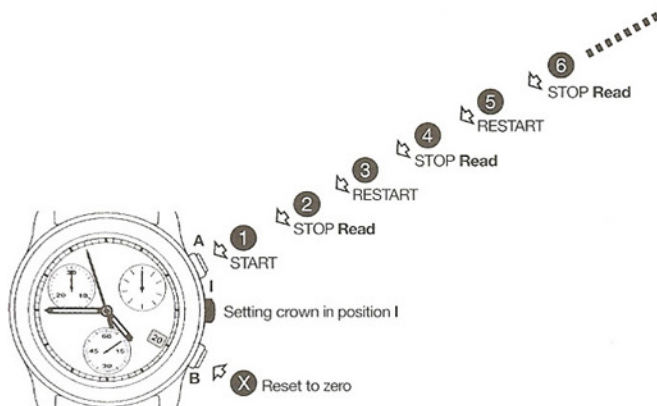**TIMING MODE****E****ADD function**

1 to X order of functions

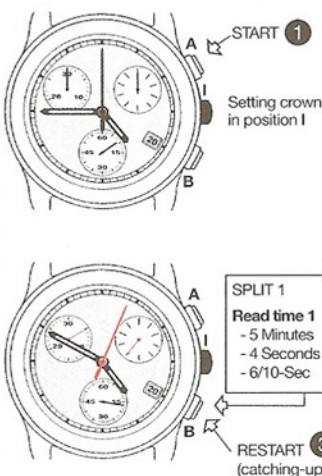**TIMING MODE****F****SPLIT-TIME or INTERMEDIATE TIMES function**

1 to 3 order of functions

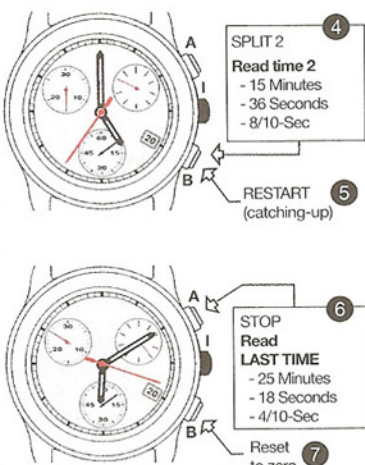**TIMING MODE****G****SPLIT-TIME or INTERMEDIATE TIMES function (cont. and end)**

4 to 7 order of functions

**WATER RESISTANT****H**

Your new watch is a water-resistant watch. Check the marking on the back of the watch, and find below the relevant usage recommendation.

\* **Water Resistant 3ATM or 30M (100 Feet)**  
Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

\* **Water Resistant 5ATM or 50M (165 Feet)**  
Suitable for showering or swimming in shallow water.

\* **Water Resistant 10ATM or 100M (330 Feet)**  
Suitable for swimming, snorkeling, but should not be worn while scuba diving.

\* **Diver's 20ATM or 200M (660 Feet)**  
Meets the higher requirements of water resistant and suitable for scuba diving.

(We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

**GENERAL CARE FOR A WATER RESISTANT WATCH****I**

\* DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.

\* DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.

\* AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.

\* LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.