

WATER RESISTANT

D

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

• Water Resistant 3ATM OR 30M (100 Feet)

Shall with stand splashes of water while washing the hand. But should not be worn while swimming or diving.

• Water Resistant 5ATM or 50M (165 Feet)

Suitable for showering or swimming in shallow water.

• Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

• Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving.

We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

GENERAL CARE FOR A WATER RESISTANT WATCH

E

- DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OR FRESH WATER AND DRY IT WITH SOFT CLOTH.
- LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

IMPORTANT

THIS WATCH IS EQUIPPED WITH AN AUTOMATIC MOVEMENT, WITH NO MANUAL WINDING FUNCTION. THE CROWN IS ONLY FOR CHANGING THE TIME. THE MOVEMENT IS ENERGIZED BY MOVEMENTS OF THE ARM OR BY THE WATCH WINDER.

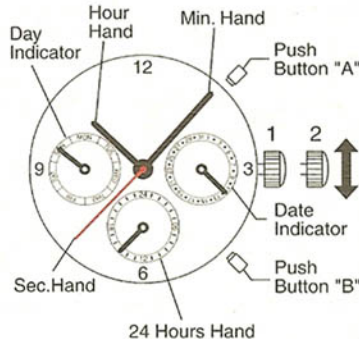
STÜHLING ORIGINAL



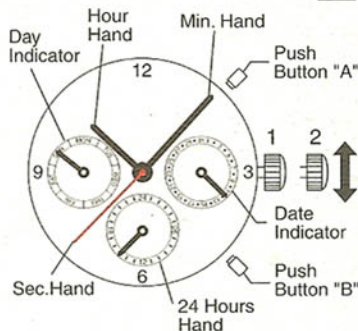
INSTRUCTION MANUAL - E

(AUTOMATIC MULTIFUNCTION MOVEMENT)

WATCH DISPLAY

A

TIME SETTING

B

CROWN POSITION 1
Home Position, watch runs

CROWN POSITION 2
Time Setting Position

- Gently pull the Crown to this position
- If the watch is fitted with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown forward to Set the time.
- The watch stops in this position.

DAY-DATE SETTING

C

(CROWN POSITION 1)
QUICK DATE SETTING

- Gently press the Button "B" using the tool supplied to set the Date.
- For each press the date jumps one date.

QUICK DAY SETTING

- Gently press the Button "A" using the tool supplied to set the Day.
- For each press the day jumps one day.