

WATER RESISTANT

D

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

* Water Resistant 3ATM OR 30M (100 Feet)

Shall with stand splashes of water while washing the hand. But should not be worn while swimming or diving.

* Water Resistant 5ATM or 50M (165 Feet)

Suitable for showering or swimming in shallow water.

* Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

* Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving.

We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

GENERAL CARE FOR A WATER RESISTANT WATCH

E

- * DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- * DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- * AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OR FRESH WATER AND DRY IT WITH SOFT CLOTH.
- * LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

IMPORTANT

THIS WATCH IS EQUIPPED WITH AN AUTOMATIC MOVEMENT, WITH MANUAL WINDING FUNCTION.

THE MOVEMENT IS ENERGIZED BY

- i. Winding the crown (or)
- ii. By the movements of the arm wrist (or)
- iii. By the watch winder

STÜHLING ORIGINAL



INSTRUCTION MANUAL - G2


AUTOMATIC GRAND DATE MOVEMENT

Refer to the appropriate version for setting instructions

WATCH DISPLAY

A

Version A

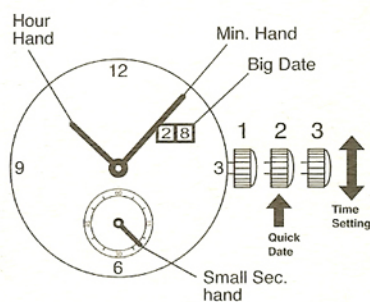

CROWN POSITION 1

Home Position, watch runs

CROWN POSITION 2 - Quick Date Change

Gently pull the Crown to this position
Rotate the Crown forward to Set the date.


CROWN POSITION 3 - Time Setting

Gently pull the Crown to this position
Rotate the Crown to Set the time.
The watch stops in this position.

WATCH DISPLAY

B

Version B

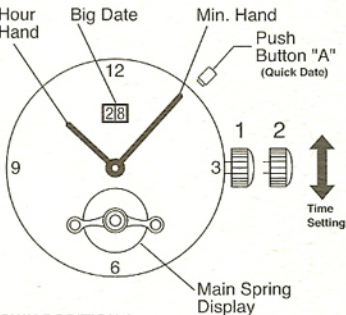

CROWN POSITION 1

Home Position, watch runs

CROWN POSITION 2 - Time Setting

Gently pull the Crown to this position
Rotate the Crown to Set the time

QUICK DATE SETTING - Crown Position1


Push Button A to advance the date. for each press the date advances by one day.

* DO NOT USE THE QUICK DATE FUNCTION BETWEEN 21:00HRS AND 4:00HRS, AS IT WILL DAMAGE THE INTERNAL PARTS OF THE MOVEMENT. (Applicable for ALL versions)

WATCH DISPLAY

C

Version C

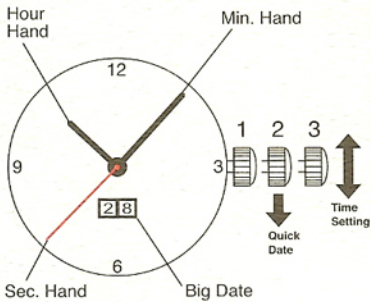

CROWN POSITION 1

Home Position, watch runs

CROWN POSITION 2 - Quick Date Change

Gently pull the Crown to this position
Rotate the Crown backward to Set the date.

CROWN POSITION 3 - Time Setting

Gently pull the Crown to this position
Rotate the Crown to Set the time.
The watch stops in this position.