

WATER RESISTANT**D**

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

- * **Water Resistant 3ATM OR 30M (100 Feet)**
Shall with stand splashes of water while washing the hand. But should not be worn while swimming or diving.
- * **Water Resistant 5ATM or 50M (165 Feet)**
Suitable for showering or swimming in shallow water.
- * **Water Resistant 10ATM or 100M (330 Feet)**
Suitable for swimming, snorkeling, but should not be worn while scuba diving.
- * **Diver's 20ATM or 200M (660 Feet)**
Meets the higher requirements of water resistant and suitable for scuba diving.
We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

GENERAL CARE FOR A WATER RESISTANT WATCH**E**

- * DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- * DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- * AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OR FRESH WATER AND DRY IT WITH SOFT CLOTH.
- * LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

IMPORTANT

THIS WATCH IS EQUIPPED WITH AN AUTOMATIC MOVEMENT, WITH MANUAL WINDING FUNCTION.

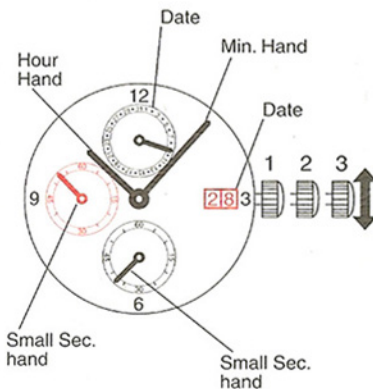
THE MOVEMENT IS ENERGIZED BY

- i. Winding the crown (or)
- ii. By the movements of the arm wrist (or)
- iii. By the watch winder

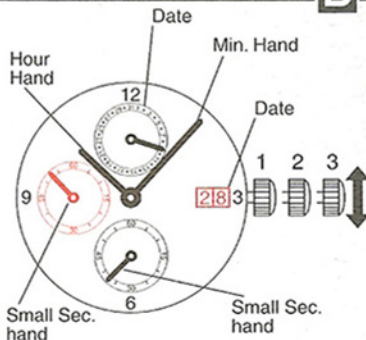
STÜHLING ORIGINAL



INSTRUCTION MANUAL - H

WATCH DISPLAY**A**

VERSION-A
VERSION-B

TIME SETTING**B**

CROWN POSITION 1
Home Position, watch runs

CROWN POSITION 3
Time Setting Position

- Gently pull the Crown to this position
- If the watch is fitted with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown to Set the time.
- The watch stops in this position.

DATE SETTING**C**

CROWN POSITION 2
Date Setting Position

- Gently pull the Crown to this position
- If the watch is fitted with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown to Set the date.