

## WATER RESISTANT

**D**

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

### • Water Resistant 3ATM OR 30M (100 Feet)

Shall with stand splashes of water while washing the hand. But should not be worn while swimming or diving.

### • Water Resistant 5ATM or 50M (165 Feet)

Suitable for showering or swimming in shallow water.

### • Water Resistant 10ATM or 100M (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

### • Diver's 20ATM or 200M (660 Feet)

Meets the higher requirements of water resistant and suitable for scuba diving.

We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

## GENERAL CARE FOR A WATER RESISTANT WATCH

**E**

- DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OR FRESH WATER AND DRY IT WITH SOFT CLOTH.
- LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

### IMPORTANT

THIS WATCH IS EQUIPPED WITH AN AUTOMATIC MOVEMENT, WITH MANUAL WINDING FUNCTION.

THE MOVEMENT IS ENERGIZED BY

- i. Winding the crown (or)
- ii. By the movements of the arm wrist (or)
- iii. By the watch winder

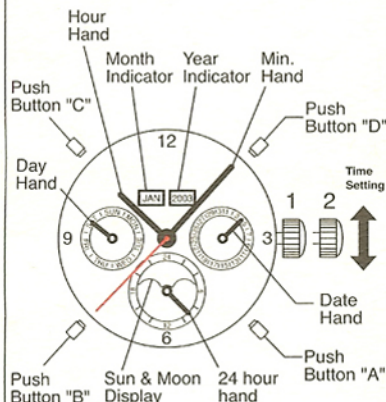
# STÜHLING ORIGINAL



## INSTRUCTION MANUAL - P 2

### AUTOMATIC GRAND CALENDAR MOVEMENT

## WATCH DISPLAY

**A**

- NO AUTOMATIC CHANGE OF MONTH AND YEAR INDICATORS  
- DO NOT OPERATE ANY QUICK SETTING BUTTON DURING  
21 00HRS - 4 00HRS AS IT WILL DAMAGE THE INTERNAL  
PARTS OF THE MOVEMENT

## QUICK SETTING MODE

**B**

### CROWN POSITION 1

#### DATE (Button A)

Press Button A to set the date. For each press the date advances by 1 date.

#### DAY (Button B)

Press Button B to set the day. For each press the day advances by 1 day.

#### MONTH (Button C)

Press Button C to set the month. For each press the month advances by 1 month.

*\*The Month to be changed manually at the end of every month as described*

#### YEAR (Button D)

Press Button D to set the year. For each press the year advances by 1 year.

*\*The Year to be changed manually at the end of every Year as described*

## TIME SETTING MODE

**C**

### CROWN POSITION 1

Winding Position, watch runs

### CROWN POSITION 2 - Time Setting

Gently pull the Crown to this position

Rotate the Crown forward to Set the time, date and day by passing through mid-night