

**WORLD TIME****F****DAY LIGHT SAVING**

- The time read for different cities using the watch is not adjusted for DST.

**LIST OF CITIES**

NEWYORK, CHICAGO, DENVER, L.ANGELES, ANCHORAGE, HAWAII, MIDWAY, AUCKLAND, NOUMEA, SYDNEY, TOKYO, HONG KONG, DHAKA, KARACHI, DUBAI, MOSCOW, JERUSALEM, PARIS, LONDON, AZORES, S.GEORGIA, R.JANEIRO, CARACAS.

**WATER RESISTANT****G**

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

- **Water Resistant 3ATM or 30M (100 Feet)**  
Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.
- **Water Resistant 5ATM or 50M (165 Feet)**  
Suitable for showering or swimming in shallow water.
- **Water Resistant 10ATM or 100M (330 Feet)**  
Suitable for swimming, snorkeling, but should not be worn while scuba diving.
- **Diver's 20ATM or 200M (660 Feet)**  
Meets the higher requirements of water resistant and suitable for scuba diving.  
  
We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

**GENERAL CARE FOR A WATER RESISTANT WATCH****H**

- DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

**IMPORTANT**

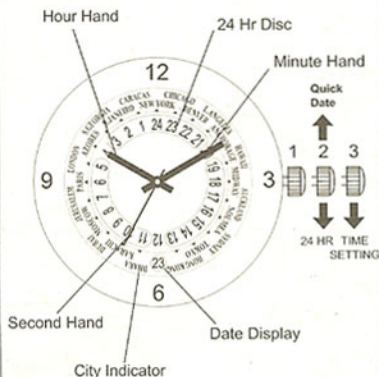
THIS WATCH IS EQUIPPED WITH A SWISS QUARTZ MOVEMENT POWERED BY A SILVER OXIDE BATTERY.  
BATTERY LIFE: ABOUT 2 YRS  
BATTERY : No.371

**STÜHLING ORIGINAL**

**INSTRUCTION MANUAL - WTD**  
(WORLD TIME QUARTZ WATCH)

**CAUTION**

DO NOT USE THE QUICK DATE SETTING BETWEEN 21:00 HRS. TO 03:00. HRS AS IT WILL DAMAGE THE MOVEMENT MECHANISM.

**WATCH DISPLAY****A**

-This World Time watch shows the time of 23 different locations across the world.  
The DST (Day Light Saving) is to be calculated manually.

**TIME SETTING****B****CROWN POSITION 1**

- Home Position, watch runs

**CROWN POSITION 3**  
**Time Setting Position**

- Gently pull the Crown to this position.
- If the Watch is fit with a Screw-down Crown, unscrew the Crown and then gently pull the Crown.
- Rotate the Crown downward to Set the time.
- When the desired time is set, push the crown back to position 1.
- The watch stops in this position.

**QUICK DATE SETTING****C****CROWN POSITION 2**

- Gently pull the Crown to this position.
- If the watch is fit with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown forward to Set the Date.
- Once the desired date is set, push the crown back to position 1.
- The watch runs in this position.

**WORLD TIME****D**

Display Time : 10:00 (Local Time - NEW YORK)

**CROWN POSITION 2**

- Gently pull the Crown to this position.
- If the watch is fit with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the 24Hr disc by rotating the crown backwards to set 10:00A.M at New York.
- Read the corresponding time of other cities using the 24Hr disc and the city indicator  
- Ex: The time at Hong Kong is 11:00 P.M
- The watch runs in this position.

**WORLD TIME****E**

SETTING THE LOCAL TIME ON THE 24HR DISC SHOWS THE TIME AROUND THE WORLD

USING THE 24HR DISC YOU MAY ALSO FIND OUT THE TIME IN OTHER CITIES WHEN NEW YORK IS 10:00P.M

- Simply rotate the crown backward in position 2, and set 22:00 (10:00P.M) at New York
- Now you can read the time in other cities using the 24Hr indicator directly when N.Y. is 22:00.