

## WORLD TIME - Wrt - LOCAL TIME

- Simply turn the crown at 9H position and set your city (or time zone) to your local time on 24 Hr display.
- Now you can read the time in other cities using the 24 Hr indicator directly.

## WORLD TIME - Wrt - HOME TIME

- Simply turn the 9H crown and set your city to your home time indicator hand (24 Hr hand).
- Now you can read the time in other cities using the 24 Hr indicator directly.

## LIST OF CITIES

NOUMEA, AUCKLAND, SYDNEY, TOKYO, HONG KONG, BANGKOK, DHAKA, KARACHI, DUBAI, MOSCOW, CAIRO, PARIS, LONDON, AZORES, S. GEORGIA, RIODEJANEIRO, CARACAS, NEW YORK, CHICAGO, DENVER, LOS ANGELES, ANCHORAGE, HAWAII, SAMOA.

Your new watch is a water-resistant watch. Check the marking on the back of the watch, find below the relevant usage recommendation.

- \* **Water Resistant 3ATM or 30M (100 Feet)**  
Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.
- \* **Water Resistant 5ATM or 50M (165 Feet)**  
Suitable for showering or swimming in shallow water.
- \* **Water Resistant 10ATM or 100M (330 Feet)**  
Suitable for swimming, snorkeling, but should not be worn while scuba diving.
- \* **Diver's 20ATM or 200M (660 Feet)**  
Meets the higher requirements of water resistant and suitable for scuba diving.  
We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

- \* DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- \* DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- \* AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- \* LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

## IMPORTANT

THIS WATCH IS EQUIPPED WITH AN AUTOMATIC MOVEMENT, WITH MANUAL WINDING FUNCTION.


THE MOVEMENT IS ENERGIZED BY

- Winding the crown (or)
- By the movements of the arm wrist (or)
- By the watch winder

## CAUTION

DO NOT USE THE QUICK DATE SETTING BETWEEN 21:00 HRS. TO 03:00. HRS AS IT WILL DAMAGE THE MOVEMENT MECHANISM.

## WATCH DISPLAY

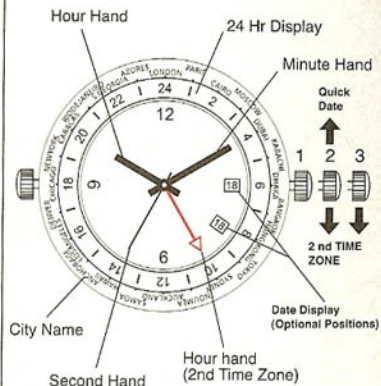

-This watch shows 2 time simultaneously. You may also find the time of 24 different locations across the world.  
(The DST (Day Light Saving) is to be calculated manually.)

## TIME SETTING

CROWN POSITION 1  
Home Position, watch runs (Winding Position)

-To wind the watch manually unscrew the Crown and start winding by turning the crown forward.

CROWN POSITION 3  
Time Setting Position

- Gently pull the Crown to this position.
- If the Watch is fit with a Screw-down Crown, unscrew the Crown and then gently pull the Crown.
- Rotate the Crown downward to Set the time.
- The watch stops in this position.

## QUICK DATE SETTING

CROWN POSITION 2  
Time Setting Position

- Gently pull the Crown to this position.
- If the watch is fit with a Screw-down Crown, unscrew the crown and then gently pull the Crown.
- Rotate the Crown forward to Set the Date
- The watch runs in this position.

## SETTING SECOND TIME ZONE

Display Time : 10:10 (Local Time)  
To Set : 18:10 (HomeTime)




## SETTING THE 2ND TIME (Crown Position 2)

- Gently Pull the Crown to this position
- If the Watch is fit with a Screw-down Crown, unscrew the crown and then gently pull the Crown
- Rotate the Crown downwards to set the 24 Hour Hand to '18' ON THE 24 Hr Display.
- The Watch runs in this position

The Time is read using the 24 Hr marker for the 2nd TIME. The Minute and the Second hands are common for both time zones.

## WORLD TIME

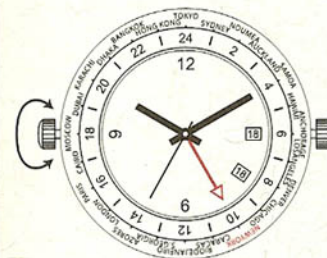

TO FIND THE TIME IN OTHER CITIES WHEN NEW YORK IS 10:00A.M.

- Simply rotate the 9H crown and set "NEW YORK" city at '10' of the 24Hr display.
- Now you can read the time in other cities using the 24Hr indicator directly.