

 
# STÜHRLING ORIGINAL



## INSTRUCTION MANUAL - N2 (QUARTZ CHRONOGRAPH) (CITIZEN OS25/OS22)

### CHRONOGRAPH RESET

This procedure should be performed when the chronograph seconds hands do not return to the ZERO position after the chronograph has been reset, or after the battery has been replaced.

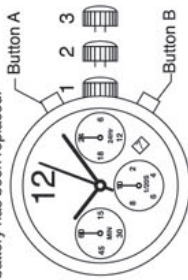


- 1- Pull the crown out to the 3 Click Position.
- 2- Press button "A" to set the chronograph second hand to the ZERO position.
- 3- Press button "B" to set the chronograph 1/20 second hand to ZERO position.
- 4- The chronograph hands can be advanced rapidly by continuously pressing button "A" or "B".
- 5- Once the hands have been zeroed, reset the time and return the crown to its normal position.

- \* Do not return crown to normal position while chronograph second hand return to (ZERO) position.
- \* Hand stops on the way when crown are returned to normal position and these position and these positions are recognized as 12:00 (ZERO) position.

### WATCH DISPLAY

 VERSION A -(CITIZEN - OS25)

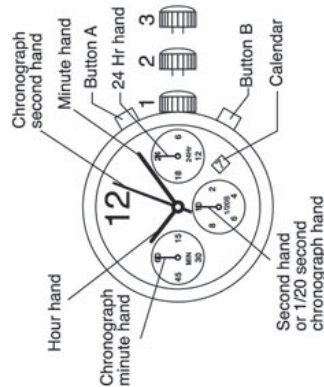

6 H SMALL SEC. HAND WILL STOP AT "0" AFTER 30 SECS IN CHRONOGRAPH MODE

This watch is equipped with a simple chronograph function to measure time upto 59mins 59secs, with an accuracy of 1/20 sec

### TACHYMETER FUNCTION

TACHYMETER is a additional function in many chronograph watches.

This is used to measure the average speed of an automobile / hour, by measuring the time it takes to cover a distance of 1Km.

 
If the chronograph is started and stopped after the vehicle covers 1 Km, the average speed can be determined according to the position of the Chronograph second hand.

For example if the car covers 1 Km in 45 Seconds, the average hourly speed during the journey is 80kmph.



### CORRECTION MODE

Setting the time  
Correction of date

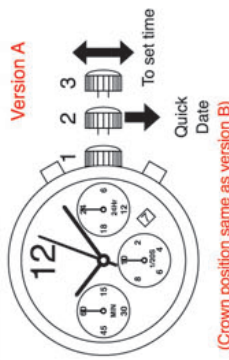

#### CROWN POSITION 2

- Quick Setting of Date**
- Gently pull the Crown to this position.
  - Rotate the Crown Backward to set the Quick Date.

#### CROWN POSITION 3

 
- Time Setting Position.**
- Gently pull the Crown to this position.
  - Rotate the Crown to set the desired time.
- If the quick date is set between 21:00hrs to 1:00hr, the date may not change on the following day.

### WATER RESISTANT

Your new watch is a water-resistant watch. Check the marking on the back of the watch, and find below the relevant usage recommendation.

- \* **Water Resistant 3ATM or 30M (100 Feet)**  
Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.
- \* **Water Resistant 5ATM or 50M (165 Feet)**  
Suitable for showering or swimming in shallow water.
- \* **Water Resistant 10ATM or 100M (330 Feet)**  
Suitable for swimming, snorkeling, but should not be worn while scuba diving.
- \* **Diver's 20ATM or 200M (660 Feet)**  
Meets the higher requirements of water resistant and suitable for scuba diving.  
(We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters)

### CHRONOGRAPH MODE (Version A)

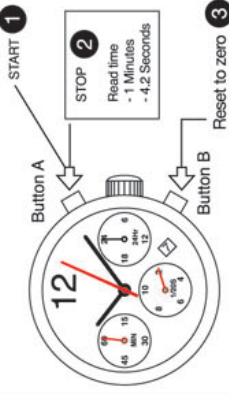

- 1 to 3 order of functions
- WARNING**  
Before starting the time, put back the chronograph hands to their original position.

#### CHRONOGRAPH COUNTING

- Press Button "A" to start and stop the chronograph second hand.
- Read the time in minutes, second and 1/20 second from 9H sub dial , chronograph second hand and 6H sub dial.  
(Ex: 1 mins 4.2 Secs. see picture)
- Reset the counters to Zero by pressing Button "B".

 
### GENERAL CARE FOR A WATER RESISTANT WATCH

- \* DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER.
- \* DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA. EXTREME HEAT CAN DAMAGE THE WATCH.
- \* AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN A STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- \* LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.

#### IMPORTANT

- \* YOUR WATCH IS EQUIPPED WITH A QUARTZ CHRONOGRAPH (1/20 SEC.) MOVEMENT WITH A MAXIMUM READING OF 59 MIN. 59 SEC..
- \* THE MOVEMENT IS POWERED BY A SR 927W BATTERY.
- \* BATTERY LIFE: ABOUT 2 YEARS.
- \* DEPENDING ON THE USAGE OF CHRONOGRAPH FUNCTIONS.

### CHRONOGRAPH MODE (Version B)

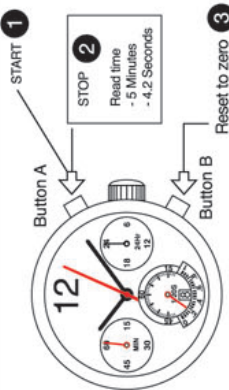

- 1 to 3 order of functions
- WARNING**  
Before starting the time, put back the chronograph hands to their original position.

#### CHRONOGRAPH COUNTING

- Press Button "A" to start and stop the chronograph second hand.
- Read the time in minutes, second and 1/20 second from 9H sub dial , chronograph second hand and 6H sub dial.  
(Ex: 1 mins 4.2 Secs. see picture)
- Reset the counters to Zero by pressing Button "B".